


Subject: Filters in Magneti Marelli CR injectors testing devices.

All Magneti Marelli injector testing devices for safe and reliable operation require regular cleaning and periodic replacement of filter cartridges. In the "R" series devices, apart from the filter on the back of the device, which should be replaced according to the device's software, there are (depending on the date of production) two additional types of filters - in-line filter and 60 µm filter (HD) on the ports. In the devices of the previous generation - "i" series, only in-line filters were used, but now we also offer HD filter assemblies, that can be added to already working devices.

Small In-Line filter

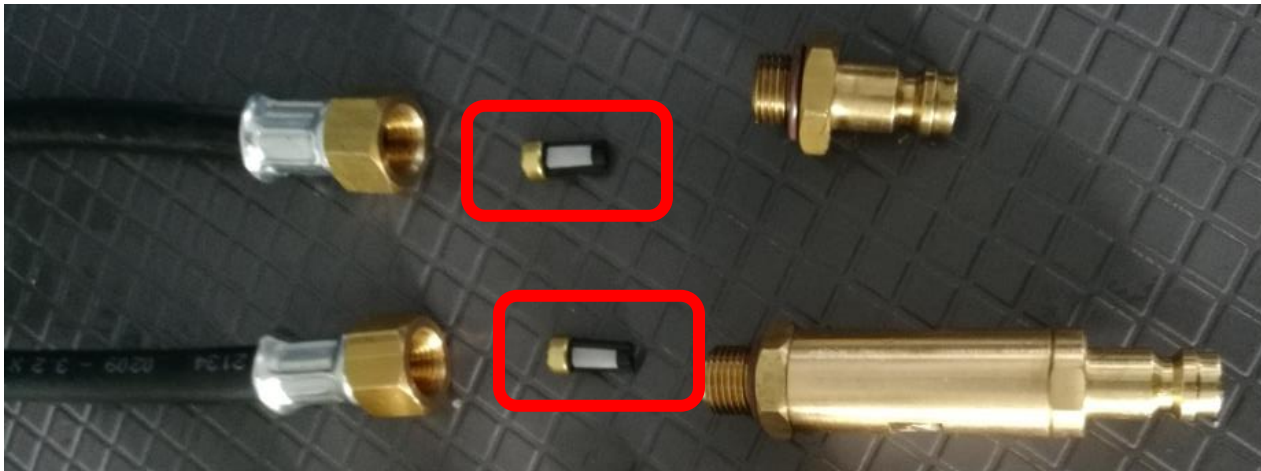

Inspection / maintenance / replacement:

CONTROL ONCE PER WEEK, COMPRESSED AIR CLEANING IN CASE OF NEED, REPLACEMENT IN CASE OF CONTAINMENT / DAMAGE

MM CODE	Description
007935101250	Small filter for D and R hoses

HD INLINE FILTER 60 µm



Inspection / maintenance / replacement:

CONTROL ONCE A WEEK, REPLACEMENT IN THE EVENT OF CLOGGING / DAMAGE, OR ANNUALLY.

MM CODE	Description
007935101940	FILTER ELEMENT FOR CRU4R,CRU2R (1pc)
007935101950	FILTER ELEMENT FOR DSR,GD1R (1pc)

High Pressure Filter (for MTBR)



Inspection / maintenance / replacement:

CONTROL EVERY 6 MONTHS OR 1250 WORKING HOURS OR ACCORDING TO PROGRAM INDICATIONS, CLEANING IN ULTRASOUND WASH, REPLACEMENT IN CASE OF CONTAINMENT / DAMAGE

For users of older devices in which the 60 µm (HD) filters were not used, there is the possibility of adding them. They are mounted between the quick coupling and the D and R lines. The filtration units are available individually or in sets (2 and 4 pieces each)



MM CODE	Description
007935101890	HD INLINE FILTER ASSEMBLIES FOR CRU.2R (2pcs)
007935101900	HD INLINE FILTER ASSEMBLIES FOR CRU.4R (8pcs)
007935101910	HD INLINE FILTER ASSEMBLIES FOR CRU.2R (2pcs)
007935101920	HD INLINE FILTER ASSEMBLIES FOR GDU.2 (1pc)
007935101930	HD INLINE FILTER ASSEMBLIES FOR GD1R (1pc)

More information:

Wojciech Wiecheć

wojciech.wiechec@magnetimarelli.com

mobile. +48 602 778 926



Magneti Marelli Aftermarket Sp. z o.o.
 Plac Pod Lipami 5
 40-476 Katowice – Polska
 Tel. +48 32 603 61 07 - Fax. +48 32 603 61 08
www.rgz-magnetimarelli.pl